


How do I change my SNMP community string for NMS server to authenticate the gateway

Configure at system

Navigate to Admin GUI: System > Setting > SNMP > Access Control

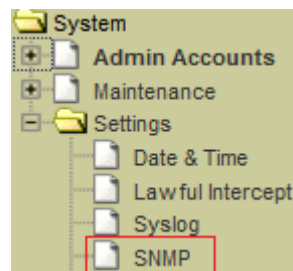

Access Control

Community	<input type="text" value="Secret"/>	No Spaces Allowed
-----------	-------------------------------------	-------------------

Click for modification

Changes saved. Please reboot the gateway for changes to take effect

Additional Note:

- Community – The community string of the NMS (Network Monitoring System) for authentication in order to poll the gateway service status information.