

Thank you for purchasing the ANTLabs Account Printer

Your Account Printer box has the following:

- Account Printer
- Power Cable
- 57 mm Paper Roll

In addition to the aforementioned items, you will need the following items to use your printer:

- Internet gateway
- Internet connection
- Ethernet cable



Setting up your Account Printer for first use

Have you configured Plans in your gateway yet?



1. Login to your gateway and go to InnGate admin > Plans.
2. Click the Add button to create a new Plan.
3. If you don't set up plans, you will be using the default Throttled plan. Proceed to Printer Setup below.

PRINTER SETUP

ADDING A PRINTER TO YOUR INNGATE

1. Login to your gateway admin page.
2. Click **Authentication > AP 2100**. Click Add.
3. Key in desired Printer Name (Char. Limit: 20, no spaces)
4. Key in Printer ID. You may get this info by clicking **About Printer** in your Account Printer's **Settings**.
5. You may add an image (e.g. your company logo) and choose to have it printed with the Access Code. The maximum image resolution is 340x500 and format can be JPG, PNG or GIF.


BUTTONS CONFIGURATION

1. In your gateway Admin UI, go to **Authentication > AP 2100** and click Buttons.
2. Select the printer you wish to configure from the dropdown menu.
3. You may add up to 12 buttons for your printer.

SETTINGS CONFIGURATION

1. Make sure the power and ethernet cables are properly connected. (See images at the back for reference)
2. Press the power button at the back of the printer to turn it On/Off.
3. Press the button at the front. This will boot up your printer and you will be shown the following: **Account Printer, Settings and Update**.
4. Click **Settings**.
5. Click **Ethernet**. Fill in your Ethernet settings. Click Save.
6. Click **Account Printer**.

7. Key in the Server IP. Click Save.
7. Check if both Ethernet and Account Printer have "Connected" statuses
8. Go back to home and click Account Printer. Print a test page. If a page is successfully printed, your printer is now ready to use. You may now exit Settings by pressing Home.

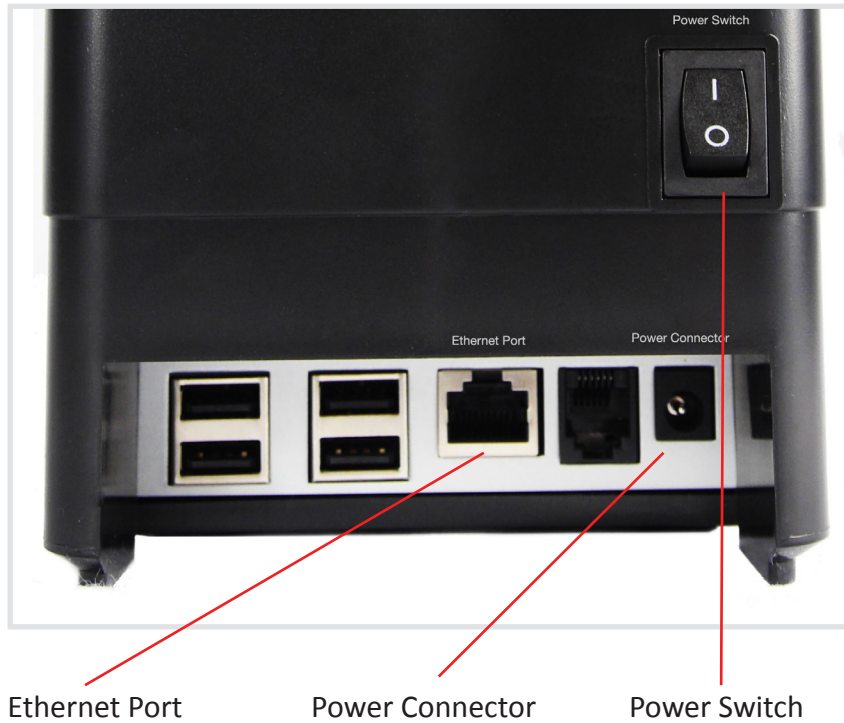

How to Reload Printer Paper



1 Press down the printer catch.



2 The printer shall be opened this way.



3 Place the roll inside and make sure that the guides hold the paper in place.