

How do I change the gateway's Internet (WAN) IP address

Configure WAN IP address information

1. Connect your laptop/PC to LAN port of the gateway
2. From Admin GUI:
 - a. Open a web browser from your laptop/PC and type "<https://ezxcess.antlabs.com/admin/>" in the address bar.

Default account:


User ID : root


Password: admin


You are recommended to change the password.



- b. Click on WAN menu. Click on the existing record.

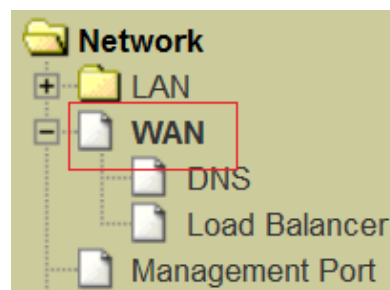

- c. Configure the WAN settings then click button  to save your settings.

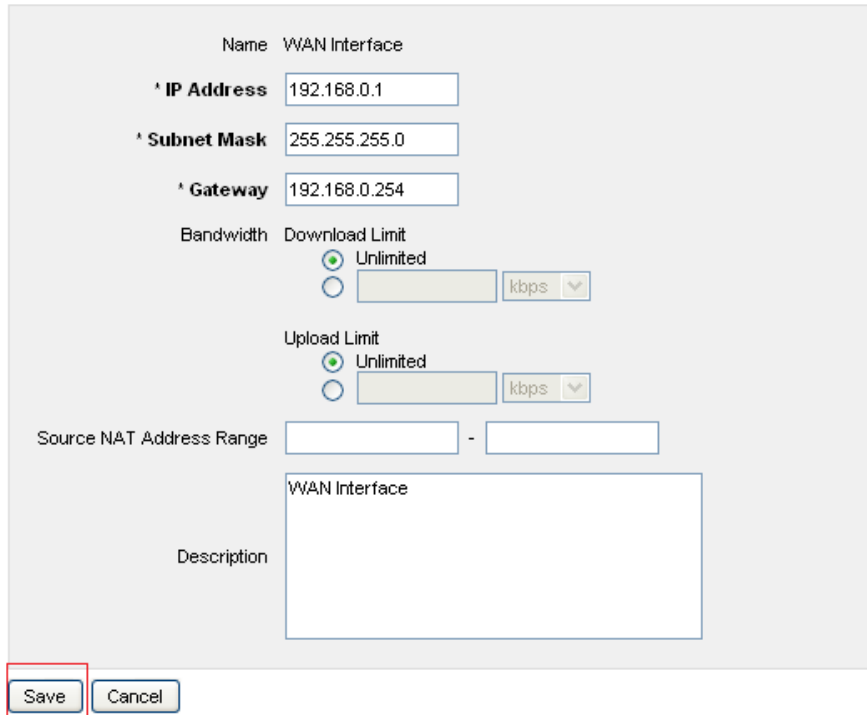

Name WAN Interface

^ IP Address 192.168.0.1

^ Subnet Mask 255.255.255.0

^ Gateway 192.168.0.254

Bandwidth Download Limit

Unlimited

kbps

Upload Limit

Unlimited

kbps

Source NAT Address Range -

Description


WAN Interface

Please reboot the gateway for the changes to take effect

Name	IP Address	Subnet Mask	Gateway	Default Route	Download Limit	Upload Limit	Source NAT Address Range	Description
WAN Interface	10.30.1.118	255.255.255.0	10.30.1.254	<input checked="" type="checkbox"/>	Unlimited	Unlimited		WAN Interface
WAN Interface 2	126.252.0.1	255.255.255.0	126.252.0.254		Unlimited	Unlimited		WAN Interface 2

Source NAT Address Range configuration can find at “How do I configure the gateway to use multiple source IP address for NAT” documentation under Network section.

- d. Click on DNS menu. Click on existing record.

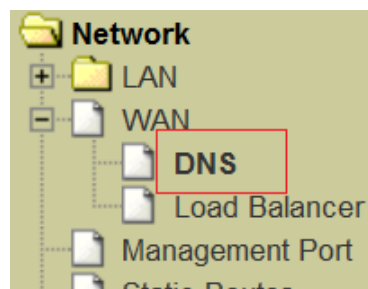

- e. Fill in the Parent DNS Server's IP address then click button to save the configuration.


* Parent DNS Server e.g: 192.168.1.1

Provide DNS reply for NXDOMAIN after login

Order	Parent DNS Server	<input type="checkbox"/>
1	192.168.123.201	<input type="checkbox"/>
2	165.21.83.88	<input type="checkbox"/>

Selected Entries:

- f. Click button to add DNS server.
It is recommended NOT to add more than two DNS servers.
- g. Click on System Maintenance menu.

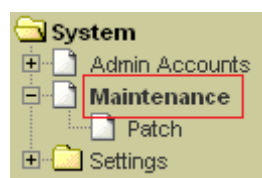

- j. Click button to restart the system.

Power

Restart Now

Shut Down Now

Gateway is now connected to the Internet.