


How do I change the time and time zone on my gateway

Configure at system

Navigate to Admin GUI: System > Settings > Date & Time

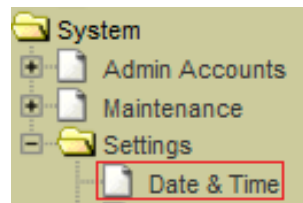

Date Format e.g. 21/10/2014
Current Date & Time
Time
New Date & Time Date e.g. 21/10/2014
Time e.g. 02:51PM

Time Zone >
Changing the system time zone requires a system restart

Click to confirm the changes.

Additional Note:

- Date Format – Choose the date format you want to use.
- New Date & Time – Specify the updated date and time here.
- Time Zone – Specify the time zone that the gateway is in. You will need to restart the gateway.